

Thank you for purchasing the 90-93 or 94-97 cold air box (CAI). Please read these instructions first before installation. This cold air box will ensure that colder ambient air is drawn into the intake and hot engine bay air is separated from intake air.

1. Put a piece of black tape next to the hole on the hood support as shown.



2. Mount the clip onto the hood support so that the threads line up with the hole.



3. Due to manufacturing tolerances, you may need to file the hole so that the threads of the clip have clearance or tap the clip with a hammer to gain clearance. Examples shown below.

3a. Filing the hole for clearance.






3b. Tapping the clip for clearance.



4. Remove the factory air box support bracket from the shock tower frame brace.

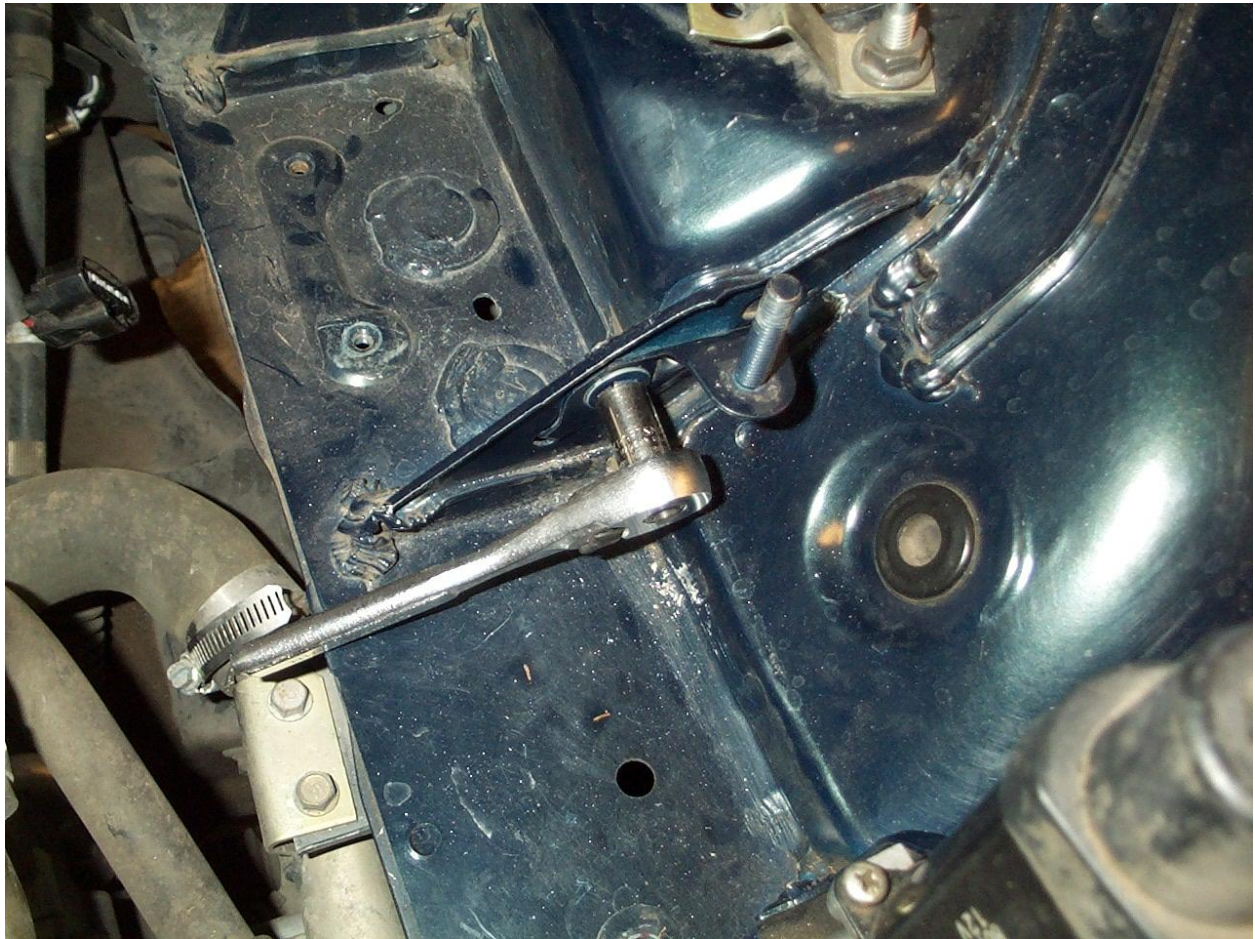



5. Remove the power steering fluid reservoir and reroute the AC cable under the reservoir bracket as shown.



6. Clear area as shown below.






7. Place box as shown below.





8. Place rear mounting bolt first and leave it loose.

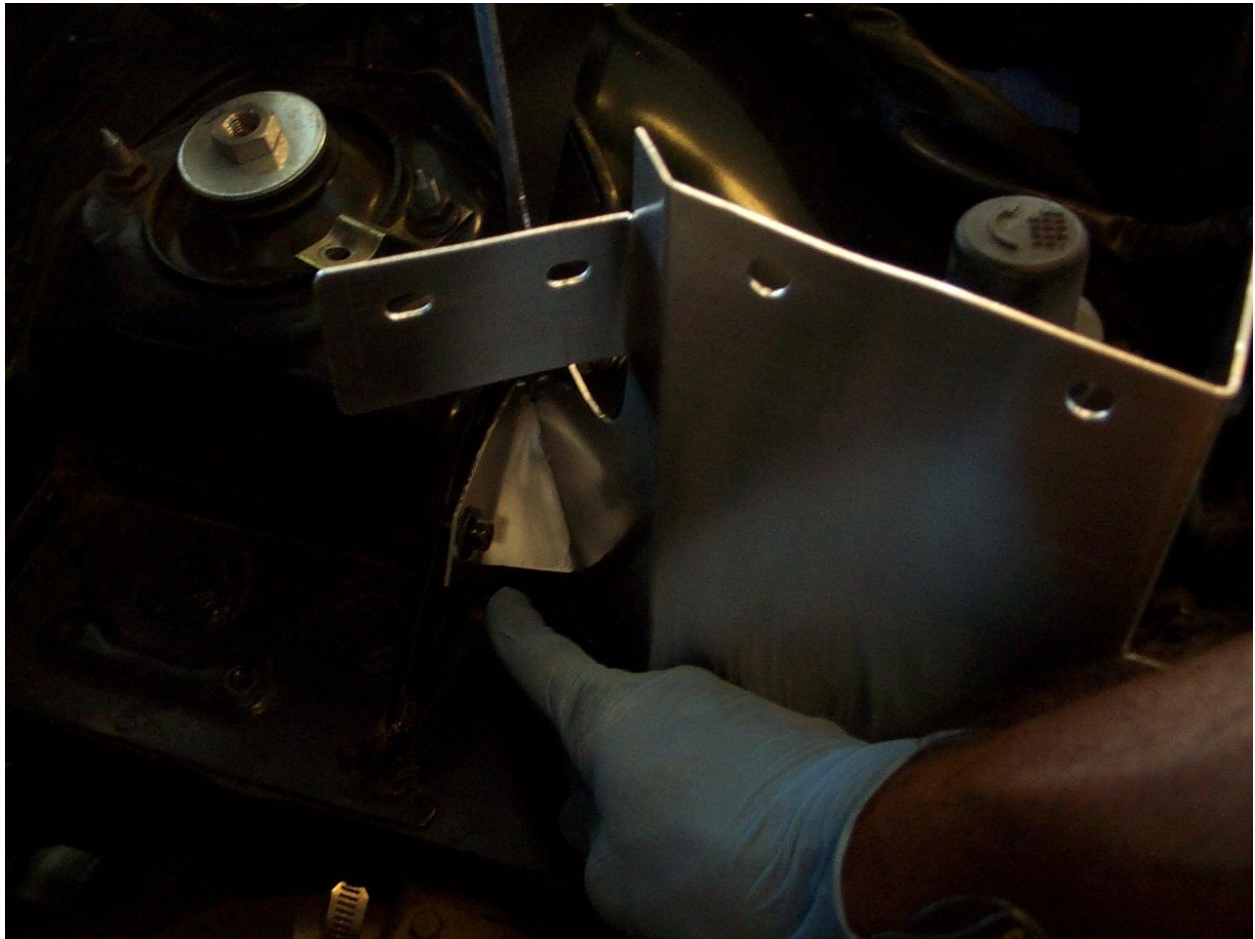


9. Place upper box tab bolt and leave loose.





10. Place power steering reservoir over front box mounting tab and install mounting screw and leave loose.

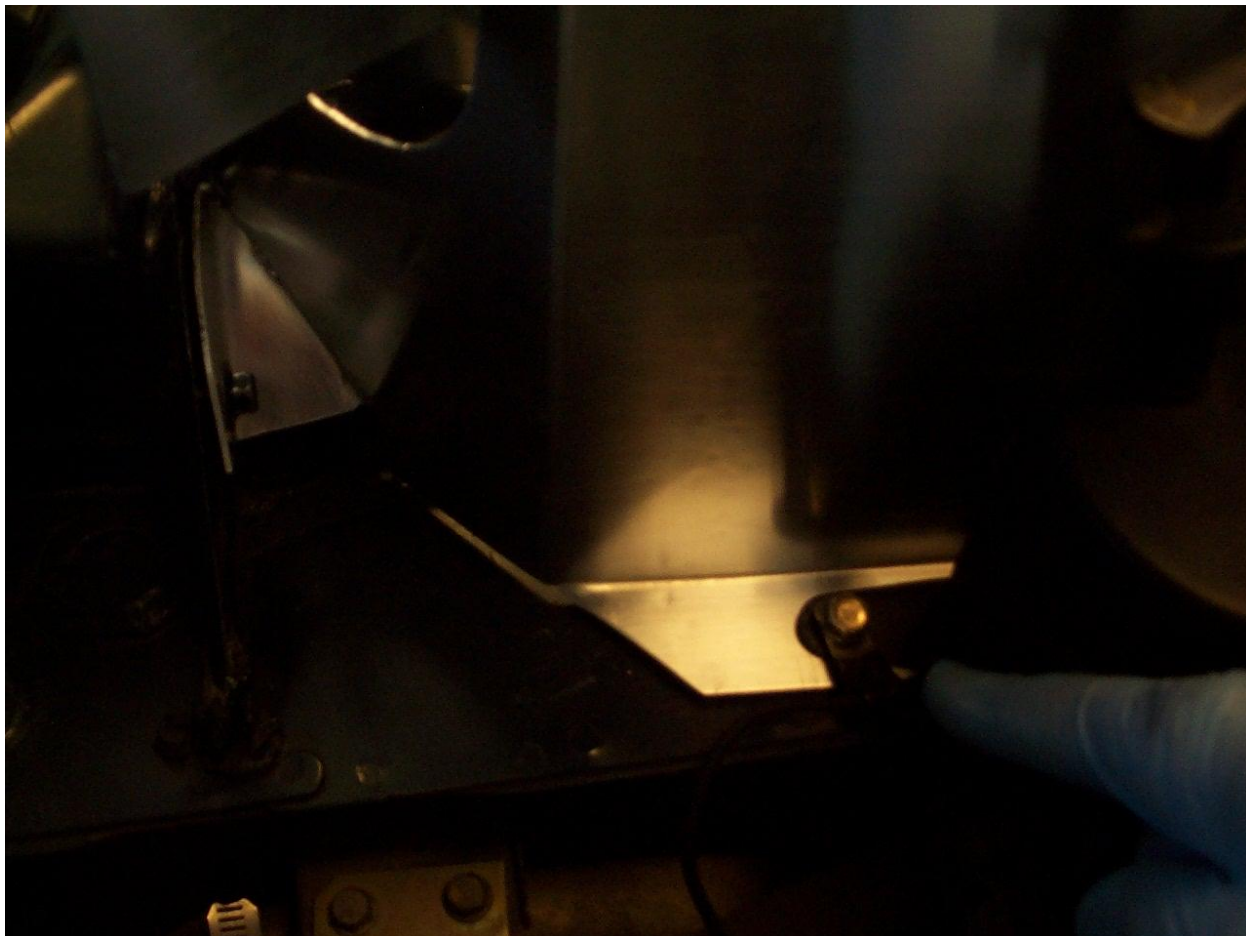

11. Then place the bolt for the front of the power steering reservoir mounting bracket. (Picture not shown). Tighten rear screw of the box, first then tighten upper screw second then front power steering bracket screws last.


12. Mount the air meter and air filter to the air box.

12a. (90-93) Mount the AFM to the box then mount the filter to the box.





12b. (94-97) Mount the filter to the MAF then attach the MAF to the box support.

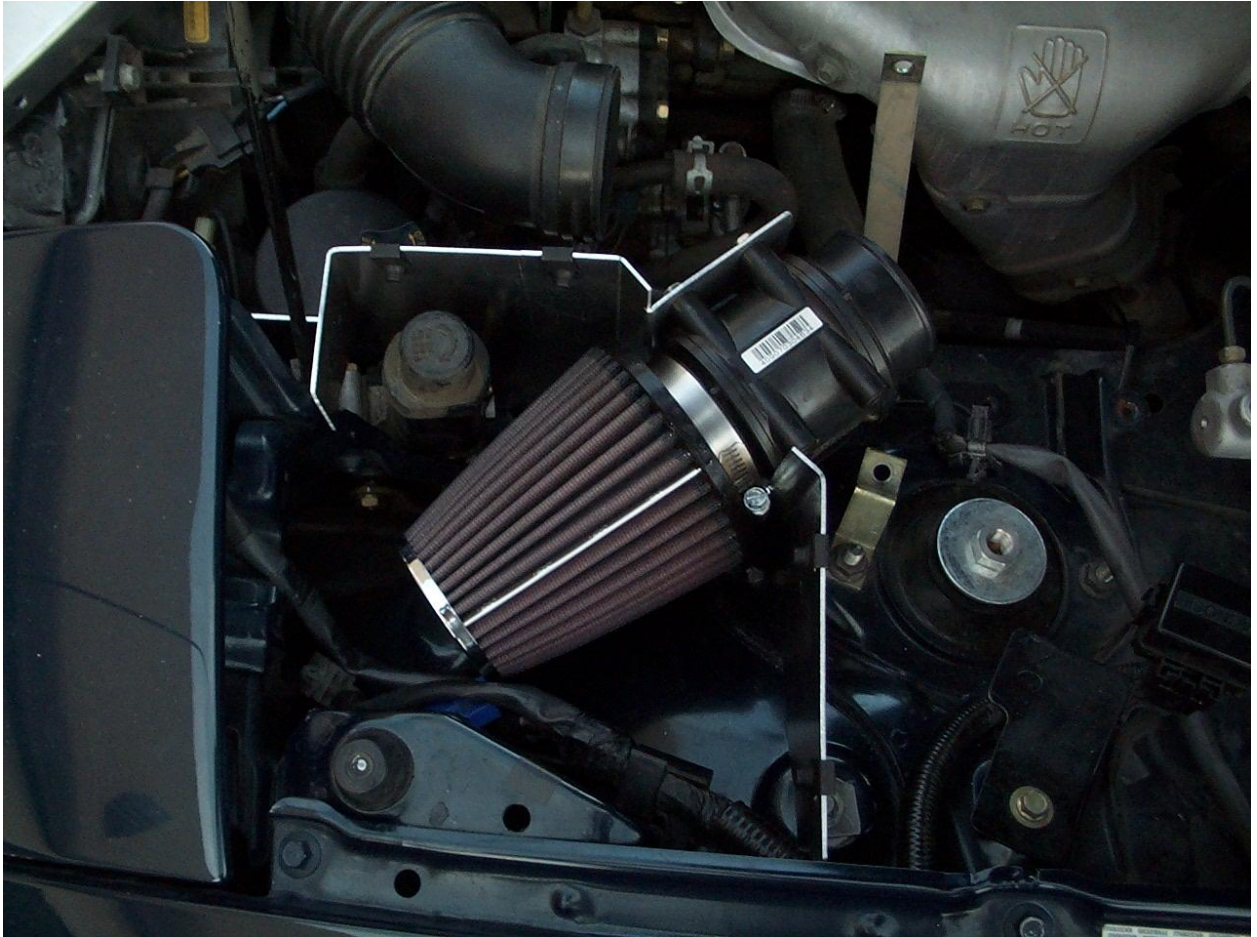

13. Place lid on box and attach lid screws and leave loose.

13a. Lid on 94-97.





13b. Lid on 90-93.



14. Place lid top screw then tighten lid side screws.



Congratulations! Your cold air box is fully installed.