



Tensioner Assembly

The tensioner plate should be assembled with the spacer as shown here for the stock 105mm pulley for all installations. This will also work for the 110mm and 115mm pulleys.

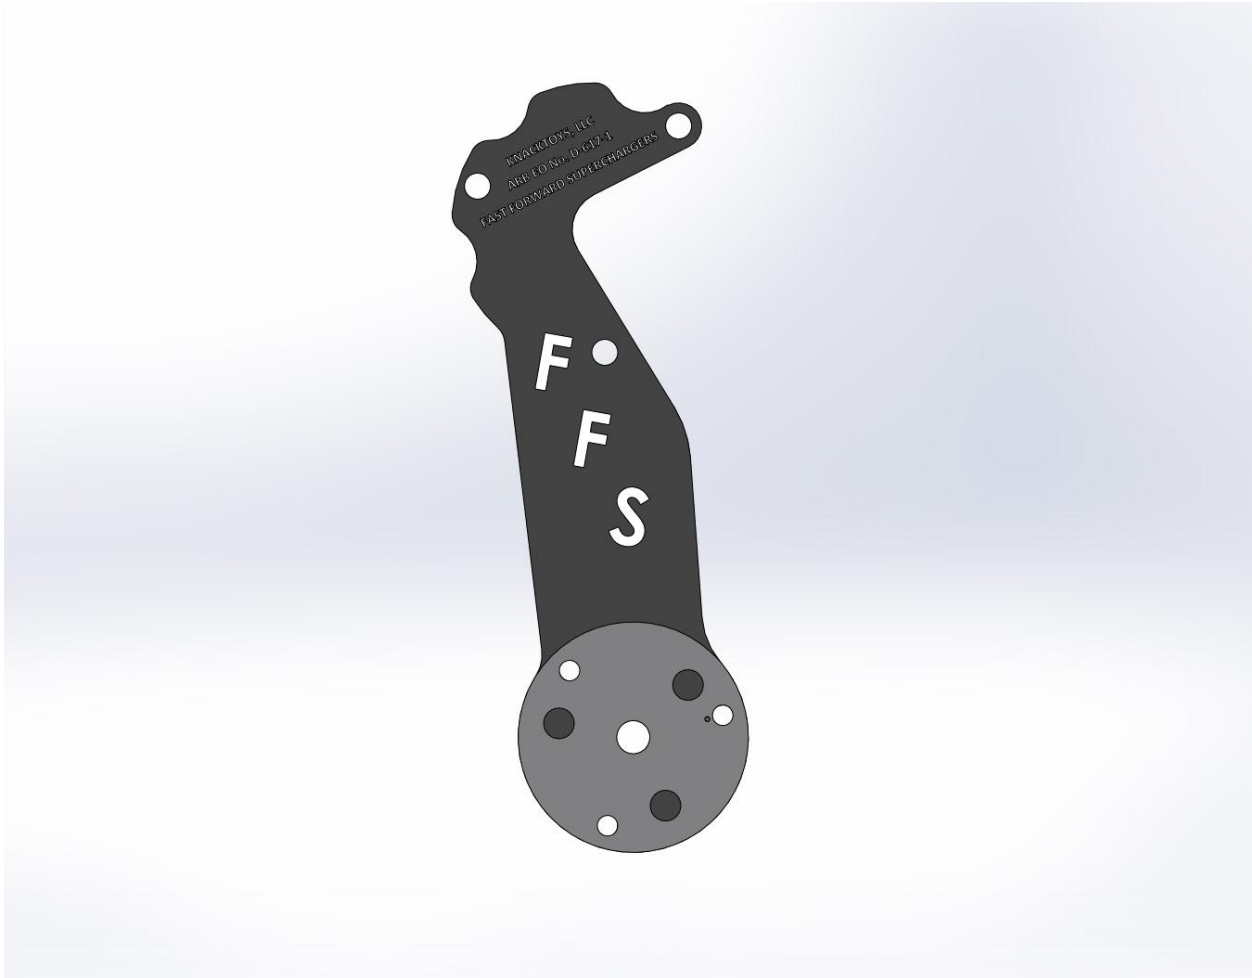

For those brave souls that have gone beyond the 115mm pulley, you might want to rotate the spacer CCW like this:

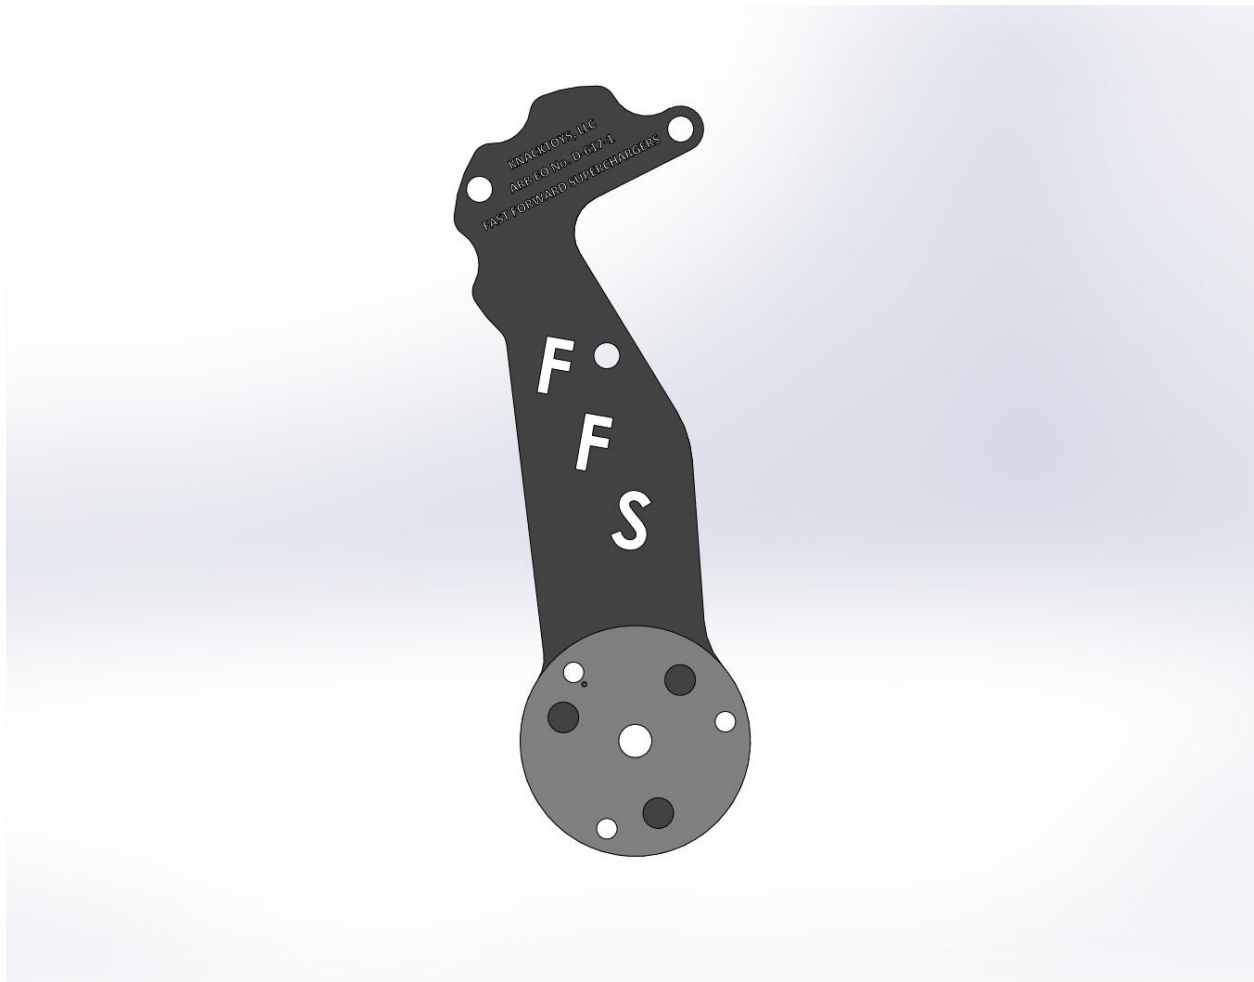

Note that the threaded hole and the associated large hole are closer together. This will cause the tensioner to rotate down slightly at the belt and make a little more room. For those who venture beyond 130mm to 140mm or 150mm or larger, you can flip the spacer over and get three more choices to make up for the lower belt return position. For those of you with older kits and now starting to add a lot more power, this applies all the way back to the first kit shipped in 2005.